








ENZYBREW L

Cleaning of the bottling machine (CIP)



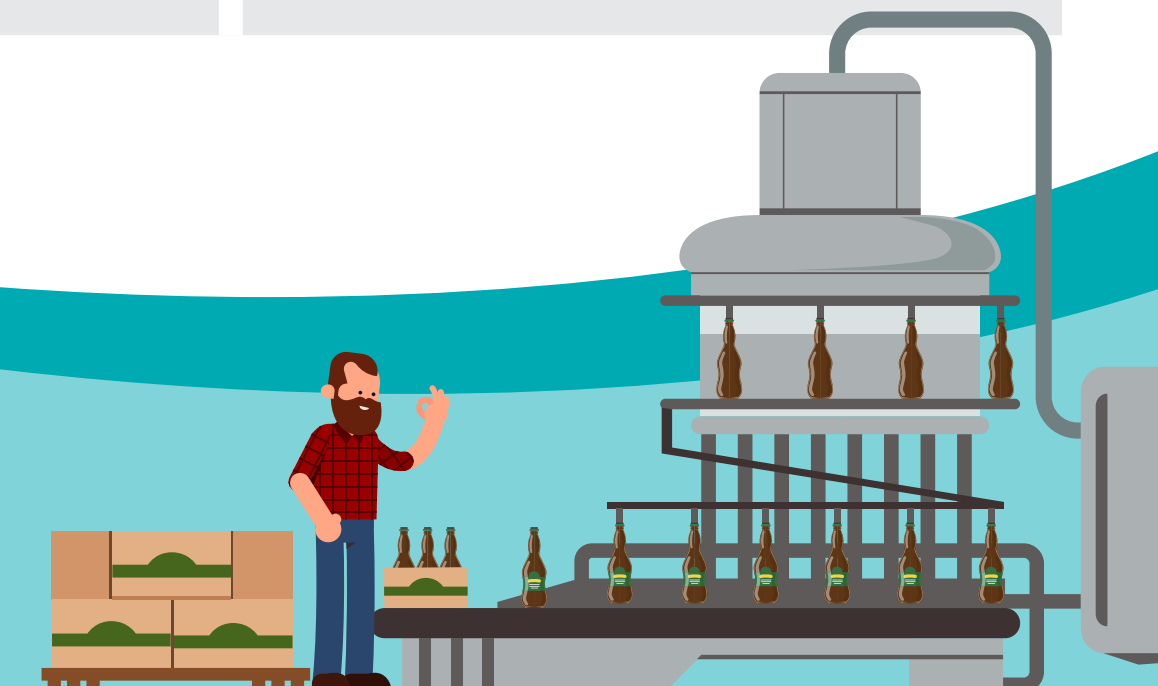

	T emperature	45 - 55°C (max)
	A ction	<ol style="list-style-type: none"> 1. Rinse the equipment with cold water for 10 min 2. Prepare an Enzybrew L solution diluted in hot water 3. Circulate the solution for 30 min 4. Rinse with cold water for 10 min 5. Disinfect with PAA (see technical sheet) 6. Rinse with cold water for 10 min 7. Disinfect with PAA before re-use
	C oncentration	1%
	T ime	30 min





ENZYBREW L

Cleaning of the bottling machine (Soaking)

	T emperature	45 - 55°C (max)
	A ction	<ol style="list-style-type: none"> 1. Rinse with cold water for 10 min 2. Prepare an Enzybrew L solution diluted in hot water 3. Soaking for 120 min minimum 4. Rinse with cold water for 10 min 5. Disinfect with PAA (see technical sheet) 6. Rinse with cold water for 10 min 7. Disinfect with PAA before re-use
	C oncentration	1%
	T ime	120 min

